



CAN VAS

A device that enables attaching a cup holding chalk, markers, paint brushes and paint tubes at a convenient height without needing to bend down. It also prevents the cup and its contents from tipping over or falling.


Suited to MÅLA easel and Ikea children's cup

ThisAbles.com

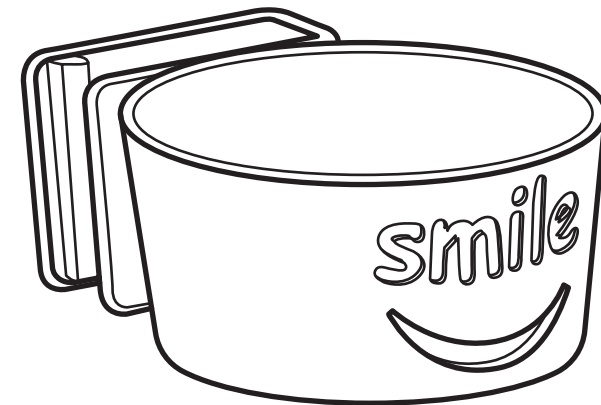

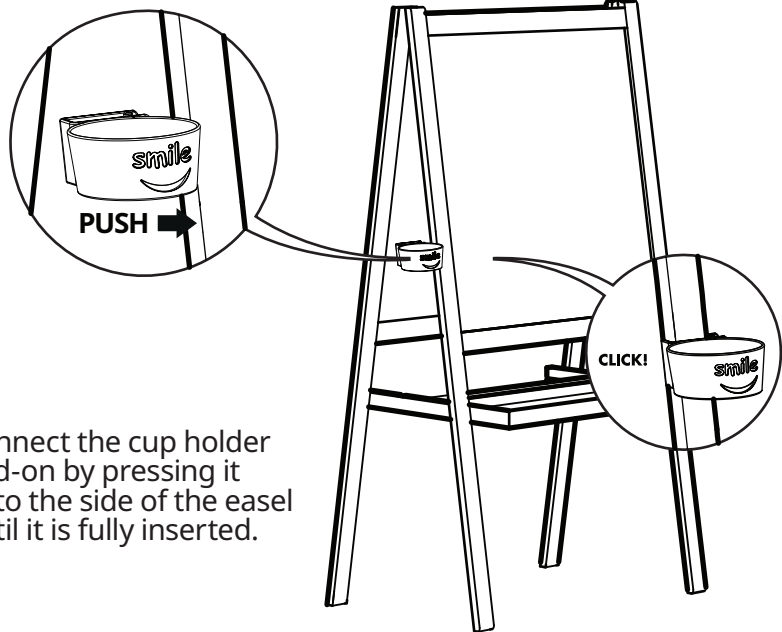

1
Connect the cup holder add-on by pressing it onto the side of the easel until it is fully inserted.

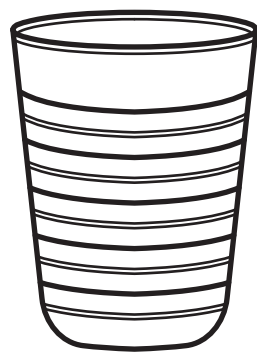

2
Fill a cup with water and place it into the holder.

